

# **NPort 6600 Series Quick Installation Guide**

---

**Version 12.1, January 2021**

**Technical Support Contact Information**  
**[www.moxa.com/support](http://www.moxa.com/support)**

**MOXA<sup>®</sup>**

© 2021 Moxa Inc. All rights reserved.

**P/N: 1802066500020**



## Overview

The NPort 6600 series of serial device servers includes 8-port, 16-port, and 32-port models for connecting larger numbers of serial devices to Ethernet. Some applications now also require better security when transmitting data through a network. The NPort 6600 series of device servers use DES, 3DES, and AES data encryption to provide secure network communication.

## Package Checklist

Before Installing your NPort 6600 series secure device server, verify that the package contains the following items:

- NPort 6600 device server
- CBL-RJ45M9-150: 8-pin RJ45 to DB9 male connection cable, 150 cm
- Power Cord (AC models only)
- Two rack-mount ears
- Documentation
- Quick installation guide (printed)
- Warranty card

## Optional Accessories


- DK-35A: 35 mm DIN-Rail Mounting Kit
- DIN-Rail Power Supply
- NM-TX01/NM-TX01-T: Network module with one 10/100BaseTX Ethernet port (RJ45 connector; supports cascade redundancy)
- NM-FX01-S-SC/NM-FX01-S-SC-T: Network module with one 100BaseFX single mode fiber port (SC connector; supports cascade redundancy)
- NM-FX02-S-SC/NM-FX02-S-SC-T: Network module with two 100BaseFX single mode fiber ports (SC connectors; supports cascade redundancy)
- NM-FX01-M-SC/NM-FX01-M-SC-T: Network module with one 100BaseFX multiode fiber port (SC connector; supports cascade redundancy)
- NM-FX02-M-SC/NM-FX02-M-SC-T: Network module with two 100BaseFX multi-mode fiber ports (SC connectors; supports cascade redundancy)

*NOTE: Please notify your sales representative if any of the above items is missing or damaged.*


## Hardware Introduction

Demonstrated 8 port model to be an example.

### Rear Views

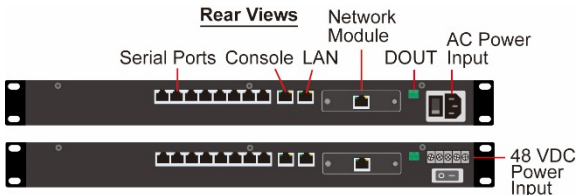

### Top View

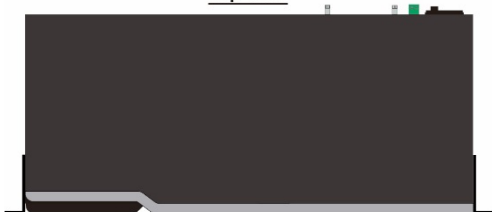

### Standard Temperature Model Front Views



### Wide Temperature Model Front Views



### Optional Network Modules




### Reset Button

Press the Reset button continuously for 5 second to load factory defaults: Use a pointed object to press the reset button. Release the button after the Ready LED stops blinking.

### RS-485 adjustable pull up/down resistor (150/1 K $\Omega$ )

The NPort 6650 has 3 DIP Switches associated with each serial port for configuring the pull up/down resistors for RS-485 applications. The switches are located in a recess on the bottom of the NPort 6650. To access the switches, first remove the panel covering the recess.



SW	1	2	3
	Pull Up	Pull Down	Terminator
ON	1 K $\Omega$	1 K $\Omega$	120 $\Omega$
OFF	150 K $\Omega$	150 K $\Omega$	-

**NOTE** For RS-232 applications, all DIP Switches for the port should be set to the OFF position.

## Rack Mounting

Use four screws to attach the NPort 6610/6650 to a standard rack.



## LED Indicators

Name	Color	Function	
PWR	Red	Power is being supplied to the power input.	
Ready	Red	Steady on:	Power is on and the NPort 6600 series is booting up.
		Blinking:	IP conflict, DHCP or BOOTP server not responding, or relay output. Check relay output first. If still blinking, then there is an IP conflict, or the DHCP or BOOTP server did not respond properly.
	Green	Steady on:	Power is on and the NPort 6600 series is functioning normally.
		Blinking:	The device server has been located by the Administrator's Locator function.
	Off	Power is off, or power error condition exists.	
Link	Orange	10 Mbps Ethernet connection.	
	Green	100 Mbps Ethernet connection.	
	Off	Ethernet cable is disconnected, or has a short.	
P1-P16 Tx	Green	Serial port is transmitting data.	
	Off	No data is being transmitted through the serial port	
P1-P16 Rx	Orange	Serial port is receiving data..	
	Off	No data is being received through the serial port.	
FX	Orange	Steady on:	Ethernet fiber connection, but port is idle.
		Blinking:	Fiber port is transmitting or receiving data.
P1-P16 in-use LEDs	Green	Serial port is opened by server side software.	
	Off	Serial port is not opened by server side software.	
Alarm	Red	The relay Dout is open (exception)	
	Off	The relay Dout is Shorted (normal)	
Module	Green	Network module is plugged in and detected	
	Off	No module present	

## LCM Display Panel

The NPort 6600 display panel will show the model name, server name, and IP address when powered up

```
N P 6 6 1 0 _ 6 6 1 0 2
1 9 2 . 1 6 8 . 1 2 7 . 2 5 4
```

## Operating the LCM Panel

There are four push buttons on the NPort 6600's top panel for operating the server's LCM panel. The function of each button is described below:

Button	Action
MENU	Activates the main menu, or returns to a lower level.
^	Scrolls up through a list of items shown on the LCM panel's second line.
∨	Scrolls down through a list of items shown on the LCM panel's second line.
SEL	Selects the option listed on the LCM panel's second line.

Detailed LCM panel operating instructions can be found on the Document and Software CD in the "NPort 6600 Series User's Manual."

**NOTE** LCM display panel and push buttons only for standard temperature model.

## Hardware Installation Procedure

**STEP 1:** Connect the NPort 6600 device server to a suitable power source.

AC models: Connect the 100 to 240 VAC power cord to the NPort 6600's power input.

DC models: Connect the terminal block to a battery.

**STEP 2:** Connect the NPort 6600 series to a network. Use a standard straight-through Ethernet cable to connect to a hub or switch. Use a cross-over Ethernet cable when connecting to your computer's Ethernet port (e.g., when setting up or testing the NPort 6600 server).

**STEP 3:** Connect the NPort 6600's serial ports to your serial devices.

## Software Installation Information

For the NPort's configuration, the default IP address of the NPort is 192.168.127.254. You may log in with the account name **admin** and password **moxa** to change any settings to meet your network topology (e.g., IP address) or serial device (e.g., serial parameters).

For software installation, download the relative utilities from Moxa's website:


[https://www.moxa.com/support/support\\_home.aspx?isSearchShow=1](https://www.moxa.com/support/support_home.aspx?isSearchShow=1)

- Download the NPort Windows Driver Manager and install it as the driver to run with Real COM mode of the NPort Series.
- Execute NPort Windows Driver Manager; then map the virtual COM ports on your Windows platform.
- You may refer to Pin Assignment Async RS-232 port section to loop back pin 4 and pin 5 for the RS-232 interface to carry out a self test on the device.
- Use HyperTerminal or a similar program (you may download Moxa's program, called PComm Lite) to test whether the device is good or not.

## Pin Assignments and Cable Wiring

### Pin Assignments (NPort 6610/6650)

Pin	RS-232	RS-422, 4-wire RS -485	2-wire RS-485
1	DSR	-	-
2	RTS	TxD+	-
3	GND	GND	GND
4	TxD	TxD-	-
5	RxD	RxD+	Data+
6	DCD	RxD-	Data-
7	CTS	-	-
8	DTR	-	-



### Pin Mapping for RS-232 Cables (NPort 6610/6650)

NPort6610/6650			Serial Device				
	RJ45		DB9(M)	DB9(F)	DB25(M)	DB25(F)	
DSR	1	←	6	4	6	20	DTR
RTS	2	→	7	8	4	5	CTS
GND	3	—	5	5	7	7	GND
TxD	4	→	3	2	2	3	RxD
RxD	5	←	2	3	3	2	TxD
DCD	6	←	1	1	8	8	DCD
CTS	7	←	8	7	5	4	RTS
DTR	8	→	4	6	20	6	DSR

### Pin Mapping for RS-422/4W-RS-485 Cables (NPort 6650)

NPort 6650			Serial Device				
	RJ45		DB9(M)	DB9(F)	DB25(M)	DB25(F)	
TxD+	2	→	7	8	4	5	RxD+
GND	3	—	5	5	7	7	GND
TxD-	4	→	3	2	2	3	RxD-
RxD+	5	←	2	3	3	2	TxD+
RxD-	6	←	1	1	8	8	TxD-

### Pin Mapping for 2W-RS-485 Cables (NPort 6650)

NPort 6650			Serial Device				
	RJ45		DB9(M)	DB9(F)	DB25(M)	DB25(F)	
GND	3	—	5	5	7	7	GND
Data+	5	↔	2	3	3	2	Data+
Data-	6	↔	1	1	8	8	Data-

## Japan Regulatory Compliance (VCCI)

The NPort 6000 Series complies with the requirements of VCCI Class A Information Technology Equipment (ITE).



## WARNING

If this equipment is used in a domestic environment, radio disturbance may arise. When such problems occur, the user may be required to take corrective action.

この装置は、クラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

VCCI-A

